


1 Connect Antennas

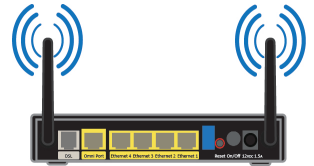

2 Connect WAN (Internet) Cable

FOR DSL WAN UPLINK:

Connect the DSL Cable to the “DSL” port.*



FOR NON-DSL WAN UPLINK:


Connect the Ethernet Cable to the “Omni” port.



* ONLY USE CABLES AND FILTERS PROVIDED BY YOUR ISP

3 Connect LAN Devices

Ethernet ports are ideal for Gaming Consoles and TV Devices.

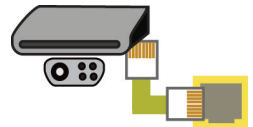


Only connect ISP provided equipment to ports labeled “IPTV”

4 Connect Power Supply



Only use the provided 12VDC / 1.5A power supply.

Always use a surge protector.

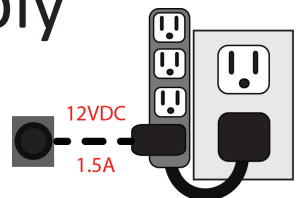





1 Search for the SSID associated with your VisionNet Gateway

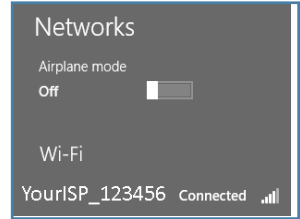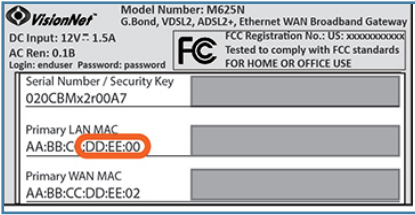

WiFi SSID ends in last 6 digits of the Bottom Label LAN MAC


2 When Prompted: Enter the Network Security Key

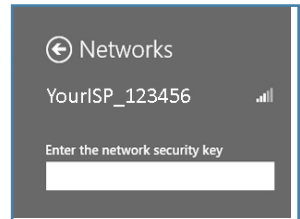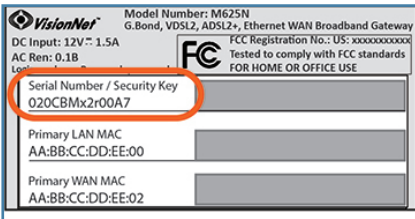

Security Key matches the Bottom Label Serial Number



IF YOU EXPERIENCE INTERMITTENT WIFI ISSUES:

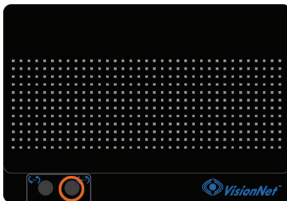

- Press the "WiFi Channel" button on the top of the M625N
- Wait 60 seconds. The M625N will select a new WiFi channel
- Attempt to reconnect



IF YOU STILL HAVE ISSUES, YOU MAY WISH TO CONTACT YOUR ISP